

# P9 BEAMSPOT

DMX Protokoll | DMX Chart

Version 1.08

Software >= 1.0.7

## Inhalt / Content

Deutsch

<b>1. Einleitung</b>	<b>03</b>
1.1 P9 Beamspot	03
<b>2.0 Menü-Übersicht P9 Beamspot</b>	<b>04</b>
<b>3.0 Anschlussmöglichkeiten</b>	<b>06</b>
3.1 DMX	06
3.1.1 Übersicht DMX-Kanäle P9 Beamspot	06
3.1.2 DMX-Kanalbelegung P9 Beamspot	08
3.1.3 Steuerkanal	14
3.1.4 Sparkle Effekt, Sparklegeschwindigkeit	14
3.1.5 Autofokus	14
3.2 Artnet	14
3.3 Streaming ACN	15
3.4 Wireless-DMX	15
3.5 RDM	15
3.5.1 RDM-UID	15
3.5.2 RDM-PIDs	15
3.5.3 Standard RDM-Parameter-IDs	16
3.5.4 Herstellerspezifische RDM-Parameter-IDs	16
<b>4. Introduction</b>	<b>19</b>
4.1 P9 Beamspot models	19
<b>5.0 Menu navigation P9 Beamspot</b>	<b>20</b>
<b>6.0 Control options</b>	<b>22</b>
6.1 DMX	22
6.1.1 Overview DMX channels P9 Beamspot	22
6.1.2 DMX channel assignment P9 Beamspot	24
6.1.3 Control channel	30
6.1.4 Sparkle effect, sparkle speed	30
6.1.5 Auto focus	30
6.2 Artnet	30
6.3 Streaming ACN	31
6.4 Wireless-DMX	31
6.5 RDM	31
6.5.1 RDM-UID	31
6.5.2 RDM-PIDs	31
6.5.3 Standard RDM parameter IDs	32
6.5.4 Manufacturer specific RDM parameter IDs	32
6.5.5 RDM sensor IDs	33

English

# 1. Einleitung

## 1.1 P9 Beamspot


Der P9 Beamspot ist in der Lichtfarbe HP (High Power) verfügbar. Er lässt sich ebenfalls problemlos in den Lichtfarben 5800K (CRI > 90) und 3200K betreiben.





Ausführung	HP - High Power	mit High CRI-Filter	mit CTO-Filter
Farbtemperatur	6800 K	5800 K	3200 K
Leuchtkraft	25.000 lm 15.000 lm Output	10.000 lm Output	7.500 lm Output
CRI	>= 70	>= 90	>= 85

## 2.0 Menü-Übersicht P9 Beamspot

  grau - entspricht der Standardeinstellung

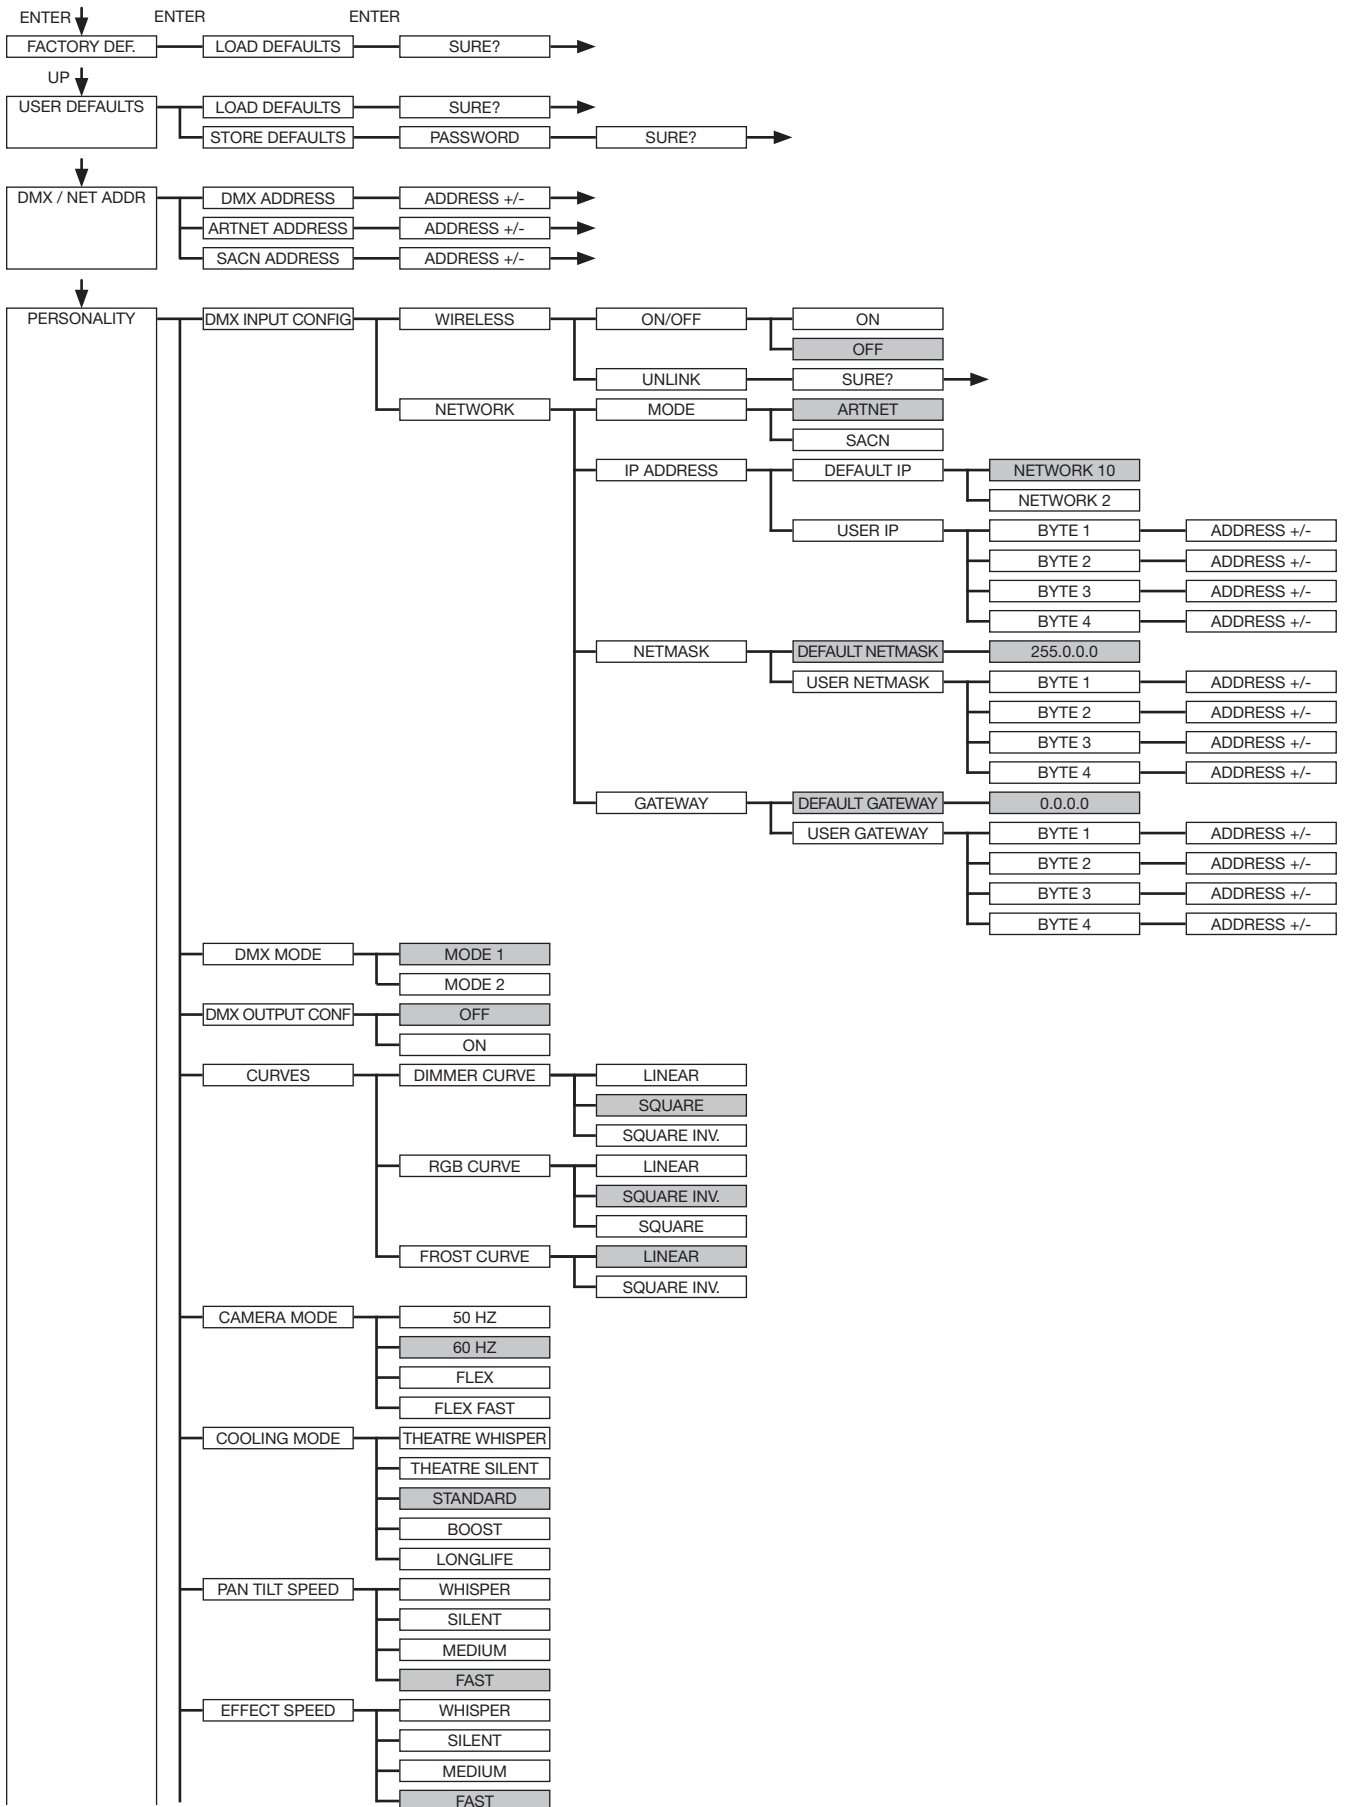

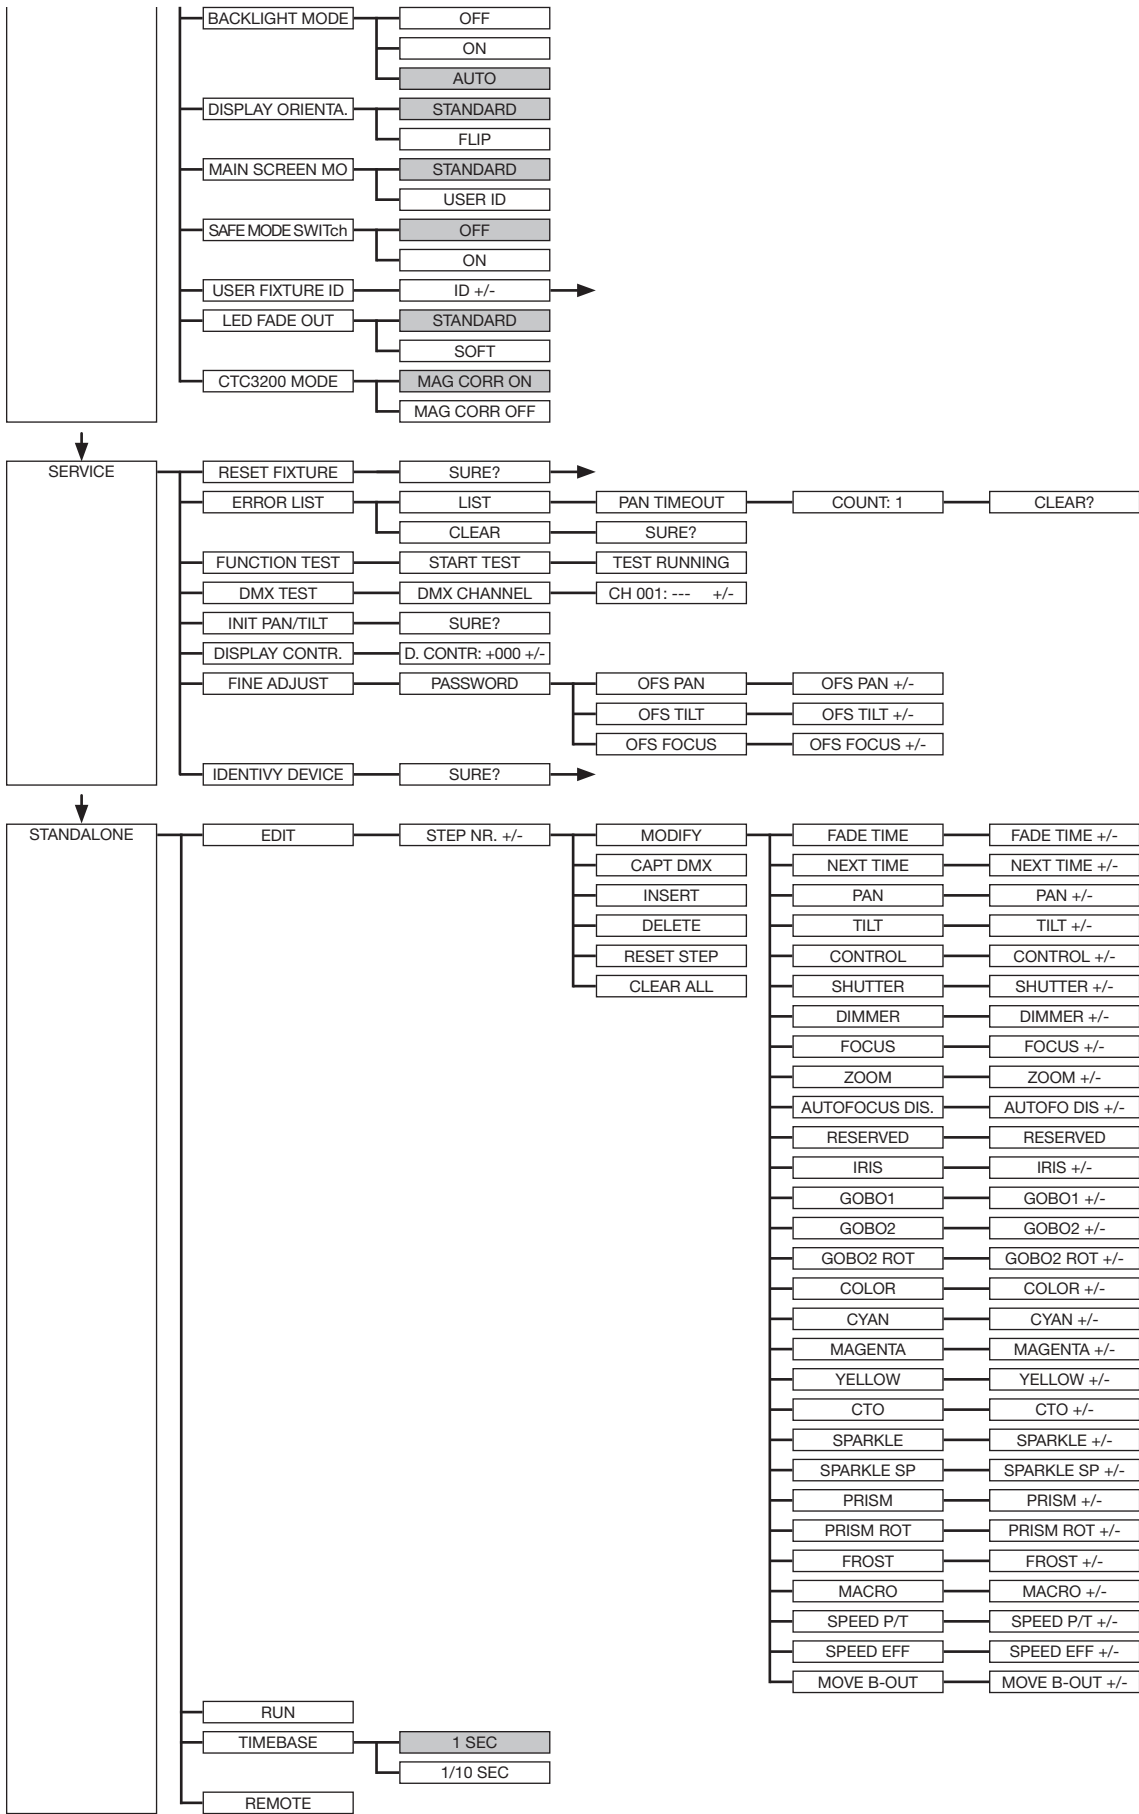

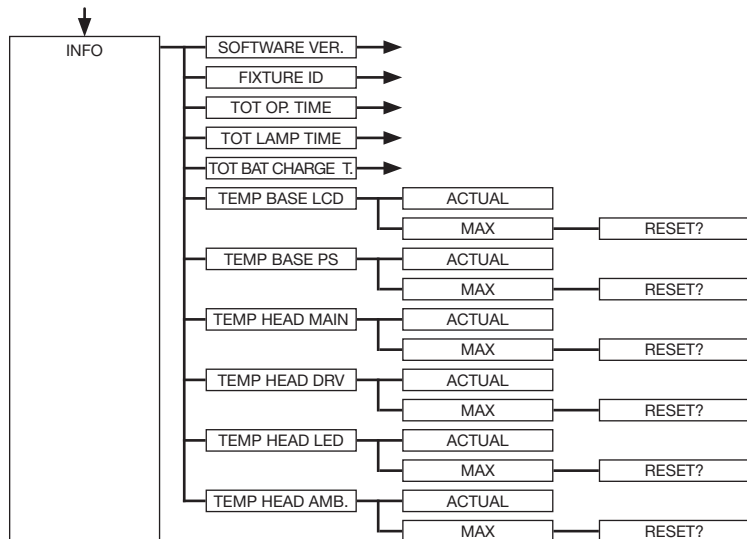

## 3.0 Anschlussmöglichkeiten

### 3.1 DMX

#### 3.1.1 Übersicht DMX-Kanäle P9 Beamspot

Der P9 Beamspot verfügt über 2 unterschiedliche DMX-Modi. Der jeweilige Modus lässt sich im Menüpunkt PERSONALITY -> DMX MODE einstellen. Der eingestellte Mode wird im Hauptmenü angezeigt.

	Mode 1(M1)	Mode 2 (M2)
Kanal 1	Pan	Pan
Kanal 2	Pan fein	Pan fein
Kanal 3	Tilt	Tilt
Kanal 4	Tilt fein	Tilt fein
Kanal 5	Steuerkanal	Steuerkanal
Kanal 6	Shutter	Shutter
Kanal 7	Dimmer	Dimmer
Kanal 8	Fokus	Dimmer fein
Kanal 9	Zoom	Fokus
Kanal 10	Autofokus Distanz	Fokus fein
Kanal 11	Reserve	Zoom
Kanal 12	Iris	Zoom fein
Kanal 13	Gobo 1	Autofokus Distanz
Kanal 14	Gobo 2	Reserve
Kanal 15	Gobo 2 Rotation	Iris
Kanal 16	Farbrad	Iris fein
Kanal 17	Cyan	Gobo 1
Kanal 18	Magenta	Gobo 2
Kanal 19	Yellow	Gobo 2 Rotation
Kanal 20	CTO	Gobo 2 Rotation fein
Kanal 21	Sparkle	Farbrad
Kanal 22	Sparkle Geschwindigkeit	Cyan
Kanal 23	Prisma 1	Cyan fein
Kanal 24	Prisma 1 Rotation	Magenta
Kanal 25	Frost 1	Magenta fein
Kanal 26	Effektmakro	Yellow
Kanal 27	Pan/Tilt-Geschwindigkeit	Yellow fein

---

Kanal 28	Effekt-Geschwindigkeit	CTO
Kanal 29	Blackout Move	CTO fein
Kanal 30		Sparkle
Kanal 31		Sparkle Geschwindigkeit
Kanal 32		Prisma 1
Kanal 33		Prisma 1 Rotation
Kanal 34		Prisma 1 Rotation fein
Kanal 35		Frost 1
Kanal 36		Effektmakro
Kanal 37		Pan/Tilt-Geschwindigkeit
Kanal 38		Effekt-Geschwindigkeit
Kanal 39		Blackout Move

 
---


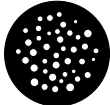





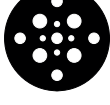






### 3.1.2 DMX-Kanalbelegung P9 Beamspot




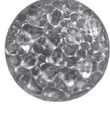
M1	M2	M3	Funktion	DMX
1	1		<b>Pan (X)</b> Bewegung 546,74°	000-255
2	2		<b>Pan (X)</b> fein (16 Bit)	000-255
3	3		<b>Tilt (Y)</b> Bewegung 281,16°	000-255
4	4		<b>Tilt (Y)</b> fein (16 Bit)	000-255
5	5		<p><b>Steuerkanal - Achtung die Funktionen des Steuerkanals können gesperrt werden. Standardmäßig ist der Kanal nicht gesperrt. Die Einstellung PERSONALITY -&gt; SAVE MODE SWITCH beachten!</b></p> <p>Um gleichmäßiges Ausdimmen manuell über Fader für alle Lichtmischpulte zu ermöglichen stehen 5 verschiedene Einstellungen für die DMX-Glättung zur Verfügung. Sollte bei manchen DMX-Pulten das DMX-Signal abreißen oder zu wenige Pakete gesendet werden, kann mit diesem Kanal das Ansprechverhalten des Scheinwerfers angepasst werden. Die Einstellung für minimale DMX-Glättung sollte bei den meisten gängigen Pulten funktionieren. Die Werte für DMX-Glättung müssen Dauerhaft an den Scheinwerfer gesendet werden. Bei den anderen Werten wie z.B. Cooling Mode, Farbtemperatur usw. müssen die Werte für 2 Sekunden anliegen, dann wird das Gerät dauerhaft umgeschaltet. (Wie bei der Umstellung im Menü PERSONALITY)</p> <p><b>Einstellung für minimale DMX-Glättung</b> (Eine gedimmte Shuttersequenz ist möglich) Dimmer Fade out über Fader (schnell - langsam) nicht belegt</p> <p><b>Einstellung für minimale/mittlere DMX-Glättung</b> Dimmer Fade out über Fader (schnell - langsam) nicht belegt</p> <p><b>Einstellung für mittlere DMX-Glättung</b> Dimmer Fade out über Fader (schnell - langsam) nicht belegt</p> <p><b>Einstellung für mittlere/maximale DMX-Glättung</b> Dimmer Fade out über Fader (schnell - langsam)</p> <p><b>BACKLIGHT MODE - Display-Hintergrundbeleuchtung</b> AUTO - der Scheinwerfer steuert die Hintergrundbeleuchtung automatisch ON - die Hintergrundbeleuchtung ist immer an OFF - die Hintergrundbeleuchtung ist immer aus, bis eine Taste gedrückt wird</p> <p><b>DISPLAY ORIENTATION - Displayausrichtung</b> STANDARD - das display ist zu lesen wenn der Scheinwerfer steht FLIP - die Displayausrichtung ist um 180° gedreht, hängend lesbar nicht belegt</p> <p><b>MAIN SCREEN MODE - Ansicht Hauptbildschirm</b> STANDARD - der Hauptbildschirm zeigt die DMX-Adresse, den DMX-Mode und bei aktiviertem Wireless die Feldstärke an. USER FIXTURE ID - der Hauptbildschirm zeigt die frei definierbare Fixture-ID / Scheinwerfernummer an nicht belegt</p> <p><b>USER FIXTURE ID SET - Scheinwerfernummer setzen</b> SET - hiermit kann die USER ID eingestellt werden. der Scheinwerfer übernimmt den 16Bit Wert von Pan für die USER ID nicht belegt</p>	<p>000-007 008-031</p> <p>032-039 040-063</p> <p>064-071 072-095</p> <p>096-103</p> <p>104-104 105-105 106-106</p> <p>107-107 108-108 109-109</p> <p>110-110 111-111 112-112</p> <p>113-113 114-127</p>

	<b>Einstellung für maximale DMX-Glättung</b> Dimmer Fade out über Fader (schnell - langsam)	128-135
	<b>DIMMER CURVE - Einstellung der Dimmerkurve</b> LINEAR - lineare Dimmerkurve SQUARE - exponentielle Dimmerkurve SQUARE INVERS - exponentiell inverse Dimmerkurve nicht belegt	136-136 137-137 138-138 139-139
	<b>RGB/CMY CURVE - Einstellung der RGB/CMY-Kurve</b> SQUARE INVERS LEGACY - ursprüngliche Kurve square inv. LINEAR - lineare RGB/CMY-Kurve angepasst an P18 MK2 SQUARE INVERS - exponentiell inverse RGB/CMY-Kurve angepasst an P18 MK2	140-140 141-141 142-142
	<b>FROST CURVE - Einstellung der Frostkurve</b> LINEAR - lineare Frostkurve SQUARE INVERS - exponentiell inverse Frostkurve nicht belegt	143-143 144-144 145-145
	<b>PAN/TILT SPEED - Pan/Tilt-Geschwindigkeit</b> WHISPER SILENT MEDIUM FAST	146-146 147-147 148-148 149-149
	<b>EFFECT SPEED - Effekt-Geschwindigkeit</b> WHISPER SILENT MEDIUM FAST	150-150 151-151 152-152 153-153
	<b>LED FADE OUT MODE - Art der Ausdimmung</b> STANDARD SOFT nicht belegt	154-154 155-155 156-157
	<b>CTC3200K MODE - Einstellung der Magentakorrektur bei CTO</b> MAG CORR ON MAG CORR OFF	158-158 159-159
	<b>COOLING MODE - Einstellung der Lüfterlautstärke und der Helligkeit</b> Die Umschaltung erfolgt mit Dimmer/Shutter zu (DMX 000) dann nach 2 Sekunden außer die Schalter "SAFE MODE SWITCH" im PERSONALITY-Menü sthet auf OFF, dann kann die Umschaltung direkt erfolgen ohne dass Dimmer und Shutter zu sein müssen. THEATRE WHISPER THEATRE SILENT STANDARD BOOST LONGLIFE nicht belegt	160-160 161-161 162-162 163-163 164-164 165-207
	<b>CAMERA MODE - Einstellung der LED-Wiederhofrequenz</b> 50Hz 60Hz FLEX - 600Hz High FLEX - 3kHz nicht belegt	208-215 216-223 224-227 228-231 232-239
	<b>RESET - ein Grundreset des Scheinwerfers wird durchgeführt</b> Reset (nach 2 Sekunden) nicht belegt	240-247 248-255

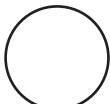6	6	<p><b>Shutter</b>          Shutter zu          Shutter auf          Shutter pulsierend öffnen &gt;20Hz (schnell - langsam)          Shutter auf          Fade-Effekt mit Dimmer (langsam - schnell)          Shutter auf          Shutter zu          Shutter pulsierend öffnen &lt;20Hz (schnell - langsam)          Shutter auf          Shutter pulsierend schließen (schnell - langsam)          Shutter zu          Shutter fade, 0% (schnell - langsam)          Shutter auf          Shutter fade, 100% (schnell - langsam)          Shutter zu          Shutter Zufall 100% (schnell - langsam)          Shutter auf          Shutter Zufall 0% (schnell - langsam)          Shutter zu          Shutter Zufall fade 0% (schnell - langsam)          Shutter auf          Shutter Zufall fade 100% (schnell - langsam)          Shutter auf</p>	<p>000-015          016-095          096-110          111-111          112-125          126-126          127-126          128-142          143-143          144-158          159-159          160-174          175-175          176-190          191-191          192-206          207-207          208-222          223-223          224-238          239-239          240-254          255-255</p>
7	7	<b>Dimmer 0 - 100%</b>	000-255
	8	<b>Dimmer fein (16Bit)</b>	000-255
8	9	<b>Fokus 0-100%</b>	000-255
	10	<b>Fokus fein (16 Bit)</b>	000-255
9	11	<b>Zoom 0 -100% (nah 3,4° - weit 54°)</b>	000-255
	12	<b>Zoom fein (16 Bit)</b>	000-255
10	13	<p><b>Autofokus Distanz</b>          Autofokus aus          Autofokus 0 m - 25,5 m (0 =aus, DMX/10=Entfernung)</p>	<p>000-001          002-255</p>
11	14	<b>Reserve (ohne Funktion)</b>	000-255
12	15	<b>Iris 0-100% (offen -&gt; zu)</b>	000-255
	16	<b>Iris fein (16Bit)</b>	000-255
13	17	<p><b>Goborad 1</b>          Gobo 0</p> <p>Gobo 1</p>	<p>000-007</p> <p>008-015</p>

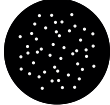

		Gobo 2		016-023
		Gobo 3		024-031
		Gobo 4		032-039
		Gobo 5		040-047
		Gobo 6		048-055
		Gobo 7		056-063
		Gobo 8		064-071
		Gobo 9		072-079
		Gobo 10		080-087
		Gobo 11		088-191
		Goborotation (schnell - langsam) Goborotation (langsam - schnell)		192-223 224-255
14	18	<b>Goborad 2 - rotierende Gobos</b>		
		Gobo 0		000-007
		Gobo 1		008-015
		Gobo 2		016-023
		Gobo 3		024-031

		Gobo 4		032-039
		Gobo 5		040-047
		Gobo 6		048-055
		Gobo 7		056-127
		Gobo 0 Shake (schnell - langsam)		128-135
		Gobo 1 Shake (schnell - langsam)		136-143
		Gobo 2 Shake (schnell - langsam)		144-151
		Gobo 3 Shake (schnell - langsam)		152-159
		Gobo 4 Shake (schnell - langsam)		160-167
		Gobo 5 Shake (schnell - langsam)		168-175
		Gobo 6 Shake (schnell - langsam)		176-183
		Gobo 7 Shake (schnell - langsam)		184-191
		Goborotation (schnell - langsam)		192-223
		Goborotation (langsam - schnell)		224-255
15	19	<b>Gobopositionierung / -rotation 2</b> Gobopositionierung 0°-540° Goborotation rechts (schnell - langsam) Goborotation Stop Goborotation links (langsam - schnell)		000-191 192-222 223-224 225-255
	20	<b>Gobopositionierung / -rotation 2 fein (16 Bit)</b>		000-255
16	21	<b>Farbrad</b> Weiss (Farbshift Gobo ein) Weiss (Farbshift Gobo aus) Weiss / CTB CTB CTB / Rot Rot Rot / Gelb Gelb Gelb / Magenta Magenta Magenta / Grün Grün Grün / Orange Orange Orange / Dunkelblau Dunkelblau Dunkelblau / Pink Pink Pink / CRI CRI CTO		000-000 001-001 002-003 004-005 006-007 008-009 010-011 012-013 014-015 016-017 018-019 020-021 022-023 024-025 026-027 028-029 030-031 032-033 034-035 036-037 038-063

		Farben linear: Weiss - CTB - Rot - Gelb - Magenta - Grün - Orange - Dunkelblau - Pink - Weiss Farbraddurchlauf rechts (schnell - langsam) Farbraddurchlauf links (langsam - schnell)	064-191 192-223 224-255
17	22	<b>Cyan</b> (8 Bit) 0-100%	000-255
	23	<b>Cyan fein</b> (16 Bit)	000-255
18	24	<b>Magenta</b> (8 Bit) 0-100%	000-255
	25	<b>Magenta fein</b> (16 Bit)	000-255
19	26	<b>Yellow (Gelb)</b> (8 Bit) 0-100%	000-255
	27	<b>Yellow (Gelb) fein</b> (16 Bit)	000-255
20	28	<b>CTO</b> (8 Bit) 0-100%	000-255
	29	<b>CTO fein</b> (16 Bit) / <b>CTB fein</b> (16 Bit)	000-255
21	30	<b>Sparkle - Glittereffekt</b> Sparkle Effekt inaktiv Sparkle Effekt Intensität (minimum - maximum)	000-000 001-255
22	31	<b>Sparkle Geschwindigkeit</b> Sparkle Effekt gefadet (langsam -> schnell) Sparkle Effekt geschaltet (langsam -> schnell) Wiederholung der Fade- und Schaltblöcke	000-031 032-063 064-255
23	32	<b>Prisma 1</b> Offen Prisma 1 (5fach linear)	000-007 008-255
24	33	<b>Prisma 1 Positionierung / Rotation</b> Prisma Positionierung (0°-540°) Prisma Rotation rechts (schnell -> langsam) Prisma Rotation stop Prisma Rotation links (langsam -> schnell)	000-191 192-222 223-224 225-255
	34	<b>Prisma 1 Positionierung / Rotation fein</b> (16 Bit)	000-255
25	35	<b>Frost 1</b> Frost 0-100%	000-255
26	36	<b>Effektmakro</b> Makro inaktiv Makro 001 - Makro 255	000-000 001-255
27	37	<b>Pan/Tilt Geschwindigkeit</b> Bewegung in Echtzeit Bewegung zeitverzögert (schnell - langsam)	000-003 004-255
28	38	<b>Effektgeschwindigkeit</b> Effekte in Echtzeit Effekte zeitverzögert (schnell - langsam)	000-003 004-255

29	39	<b>Blackout Move</b> Nicht belegt Blackout bei Pan/Tilt Blackout bei Gobo, Farbe, Prisma, CMY, Iris, Frost Blackout bei Gobo, Farbe, Prisma, CMY, Iris, Frost, Zoom, Fokus Blackout bei Gobo, Farbe, Prisma, CMY, Iris, Frost, Pan/Tilt Blackout bei Gobo, Farbe, Prisma, CMY, Iris, Frost, Zoom, Fokus, Pan/Tilt	000-095 096-127 128-159 160-191 192-223 224-255
----	----	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------

### 3.1.3 Steuerkanal

Über den Steuerkanal können verschieden Funktionen des Scheinwerfers umgeschaltet werden. Folgende Funktionen können über den Steuerkanal umgeschaltet werden.

Ansprechverhalten des Scheinwerfers beim Ausdimmen über Fader

BACKLIGHT MODE - Display Hintergrundbeleuchtung

DISPLAY ORIENTATION - Displayausrichtung

MAIN SCREEN MODE - Ansicht Hauptbildschirm

USER FIXTURE ID SET - Scheinwerfernummer setzen

DIMMER CURVE - Einstellung der Dimmerkurve

FROST CURVE - Einstellung der Frostkurve

PAN/TILT SPEED - Pan/Tilt-Geschwindigkeit

EFFECT SPEED - Effekt-Geschwindigkeit

LED FADE OUT MODE - Art der Ausdimmung

CTC3200 Mode - Einstellung der Magentakorrektur bei CTO

COOLING MODE - Einstellung der Lüfterlautstärke und der Helligkeit

CAMERA MODE - Einstellung der LED-Wiederholfrequenz

RESET - Ein Grundreset des Scheinwerfers wird durchgeführt

Die Details hierzu siehe DMX-Kanalfunktionen für den P9 Beamspot auf der Seite 08.

### 3.1.4 Sparkle Effekt, Sparklegeschwindigkeit

Über diesen Kanal können in Verbindung mit dem Fokus Animationseffekte erzeugt werden. Je nach Intensität wird die Abbildung mehr oder weniger zum pulsieren angeregt. Dieser Effekt kann gefadet oder geschaltet werden.

### 3.1.5 Autofokus

Zum Aktivieren der Autofokusfunktion den Kanal Autofokus-Distanz auf etwa 50 % stellen. Danach für die Feinjustage des Systems am besten Goborad 2 verwenden und entsprechend den Fokus auf 125 (32000) einstellen: Anschließend über Autofokus-Distanz die Entfernung des Scheinwerfers durch scharf stellen des Scheinwerfers einstellen. Als Richtwert kann der DMX-Wert geteilt durch 10 für die Entfernung (DMX 100 / 10 Entfernung = 10m) angenommen werden. Jetzt kann der Scheinwerfer über den Zoom mit Autofokus betrieben werden.

Anhand der folgenden Tabelle können nun die Fokuswerte für die einzelnen Effekte vorgewählt werden und über Zoom mit Autofokus gezoomt werden.

	Gobo1	Gobo2 Open	Iris
Fokus 8Bit	95	125	215
Fokus 16Bit	24320	32000	55040

## 3.2 Artnet

Der Scheinwerfer kann über Artnet - ArtNET 4 angesteuert werden. Hierzu über den Menüpunkt DMX / NET ADDR -> ARTNET ADDRESS die Artnetadresse einstellen und zusätzlich über den Menüpunkt PERSONALITY -> DMX INPUT CONFIG -> NETWORK -> MODE -> ARTNET auswählen. Zusätzlich noch die IP-Adresse des Scheinwerfers über PERSONALITY -> DMX INPUT CONFIG -> NETWORK -> IP ADDRESS definieren.

### **3.3 Streaming ACN**

Der Scheinwerfer kann über sACN - Streaming ACN angesteuert werden. Hierzu über den Menüpunkt DMX / NET ADDR -> SACN ADDRESS die sACN-Adresse einstellen und zusätzlich über den Menüpunkt PERSONALITY -> DMX INPUT CONFIG -> NETWORK -> MODE -> SACN auswählen. Zusätzlich noch die IP-Adresse des Scheinwerfers über PERSONALITY -> DMX INPUT CONFIG -> NETWORK -> IP ADDRESS definieren.

### **3.4 Wireless-DMX**

Der P9 Beamspot ist mit einem Lumen-Radio CRMX-Empfänger für Wireless DMX ausgestattet. Der Empfänger kann sowohl DMX als auch RDM verarbeiten. Sollte eine Kabel und Wirelessverbindung am P9 Beamspot anliegen hat die Kabelverbindung Vorrang! Das empfangene Signal kann über den DMX-Anschluß ausgegeben werden. Hierzu im Menü PERSONALITY die Einstellung DMX OUTPUT CONFIG auf ON stellen, nach Bestätigung mit ENTER gibt der Scheinwerfer das komplette über Wireless-DMX empfangene Universum aus.

### **3.5 RDM**

Der P9 Beamspot kann über RDM (Remote Device Management) gemäß ESTA American National Standard E1.20-2006 kommunizieren. RDM ist ein bidirektionales Kommunikationsprotokoll für den Einsatz in DMX512-Steuerungssystemen. Es ist der offene Standard für die Konfiguration und Statusüberwachung von DMX-512-Geräten. Das RDM-Protokoll ermöglicht das Einfügen von Datenpaketen in einen DMX-512-Datenstrom, ohne dass bestehende Nicht-RDM-Geräte beeinträchtigt werden. Es ermöglicht einer Konsole oder einem dedizierten RDM-Controller, Befehle an bestimmte Geräte zu senden und Nachrichten zu empfangen. Der P18 kann RDM über DMX und Artnet 4 senden und empfangen. Ebenfalls ist der Scheinwerfer dafür ausgelegt RDM über sACN zu senden und über Artnet zu empfangen. Die RDM-Funktionalität ist abhängig vom eingesetzten Lichtsteuerpult, hierzu muss ebenfalls die Bedienungsanleitung des jeweiligen Pultherstellers beachtet werden.

#### **3.5.1 RDM-UID**

Jeder P9 Beamspot hat eine werksseitig festgelegte RDM-UID (eindeutige Identifikationsnummer), die ihn in RDM-Systemen adressierbar und identifizierbar macht.

#### **3.5.2 RDM-PIDs**

Der P9 Beamspot unterstützt die gemäß ESTA erforderlichen RDM-PIDs (Parameter-IDs) sowie herstellerspezifische PIDs.

### 3.5.3 Standard RDM-Parameter-IDs

RDM-Parameter-ID	GET Befehl	SET Befehl	DISCO- VERY	Anmerkungen
<b>RDM-Identifikation</b>				
DISC_UNIQUE_BRANCH			✓	dient der Scheinwerferidentifikation
DISC_MUTE			✓	dient der Scheinwerferidentifikation
DISC_UN_MUTE			✓	dient der Scheinwerferidentifikation
<b>RDM-Statusermittlung</b>				
QUEUED_MESSAGE	✓			
STATUS_MESSAGES	✓			
STATUS_ID_DESCRIPTION	✓			
CLEAR_STATUS_ID		✓		
<b>RDM-Information</b>				
SUPPORTED_PARAMETERS	✓			
<b>RDM-Konfiguration</b>				
DEVICE_MODEL_DESCRIPTION	✓			
MANUFACTURER_LABEL	✓			
FACTORY_DEFAULTS		✓		
SOFTWARE_VERSION_LABEL	✓			
DMX_PERSONALITY		✓		
DMX_PERSONALITY_DESCRIPTION	✓			
DMX_START_ADDRESS		✓		
SENSOR_DEFINITION	✓			
DEVICE_HOURS	✓			
LAMP_HOURS	✓			
IDENTIFY_DEVICE		✓		
RESET_DEVICE		✓		
PERFORM_SELFTEST		✓		
SELFTEST_DESCRIPTION	✓			

### 3.5.4 Herstellerspezifische RDM-Parameter-IDs

RDM-Parameter-ID	GET Befehl	SET Befehl	DISCO- VERY	Anmerkungen
<b>RDM-Konfiguration</b>				
Battery Charge Hours	✓			
Error Number	✓			
Error	✓			
Select Next Error		✓		
Remove Error		✓		
Remove New Error Flag		✓		
User Defaults		✓		
User Fixture ID		✓		
Fixture Lock On/Off	✓	✓		
Dimmer Curve	✓	✓		
RGB Curve	✓	✓		
Frost Curve	✓	✓		
Camera Mode	✓	✓		

Cooling Mode	✓	✓		
Pan Tilt Speed	✓	✓		
Effect Speed	✓	✓		
Backlight Mode	✓	✓		
Disp Orientation	✓	✓		
Main Screen Mode	✓	✓		
Safe Mode Switch	✓	✓		
LED Fade Out Mode	✓	✓		
CTC3200 Mode	✓	✓		

English

## 4. Introduction


### 4.1 P9 Beamspot models


The P9 beam spot is available in the light color HP (High Power). It can also be operated without any problems in the light colors 5800K (CRI> 90) and 3200K.




Specification	HP - High Power	with High CRI filter	with CTO filter
Color temperature	6800 K	5800 K	3200 K
Luminosity	25.000 lm (15.000 lm output)	10.000 lm output	7.500 lm output
CRI	$\geq 70$	$\geq 90$	$\geq 85$

## 5.0 Menu navigation P9 Beamspot

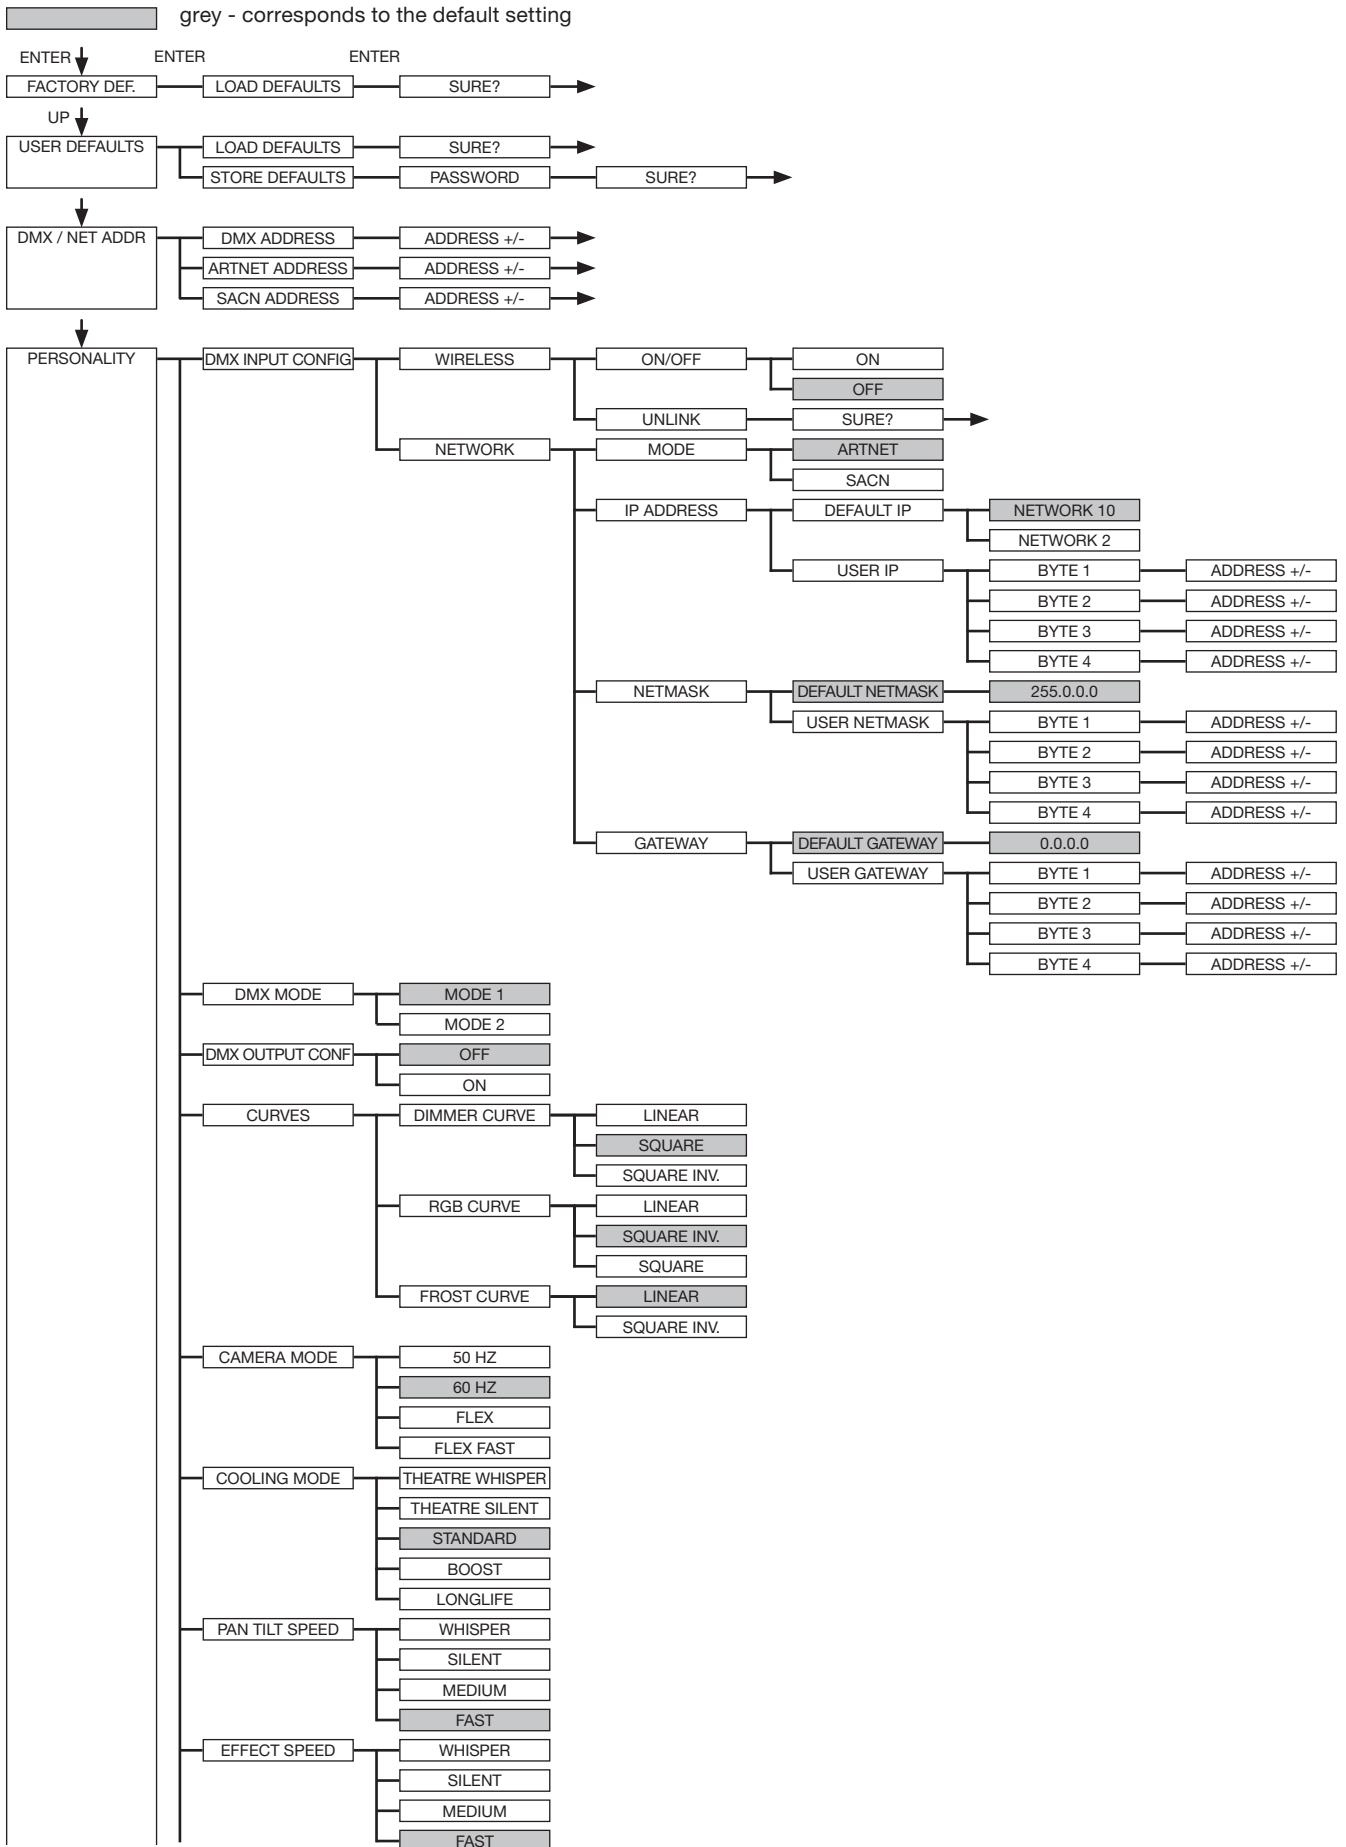

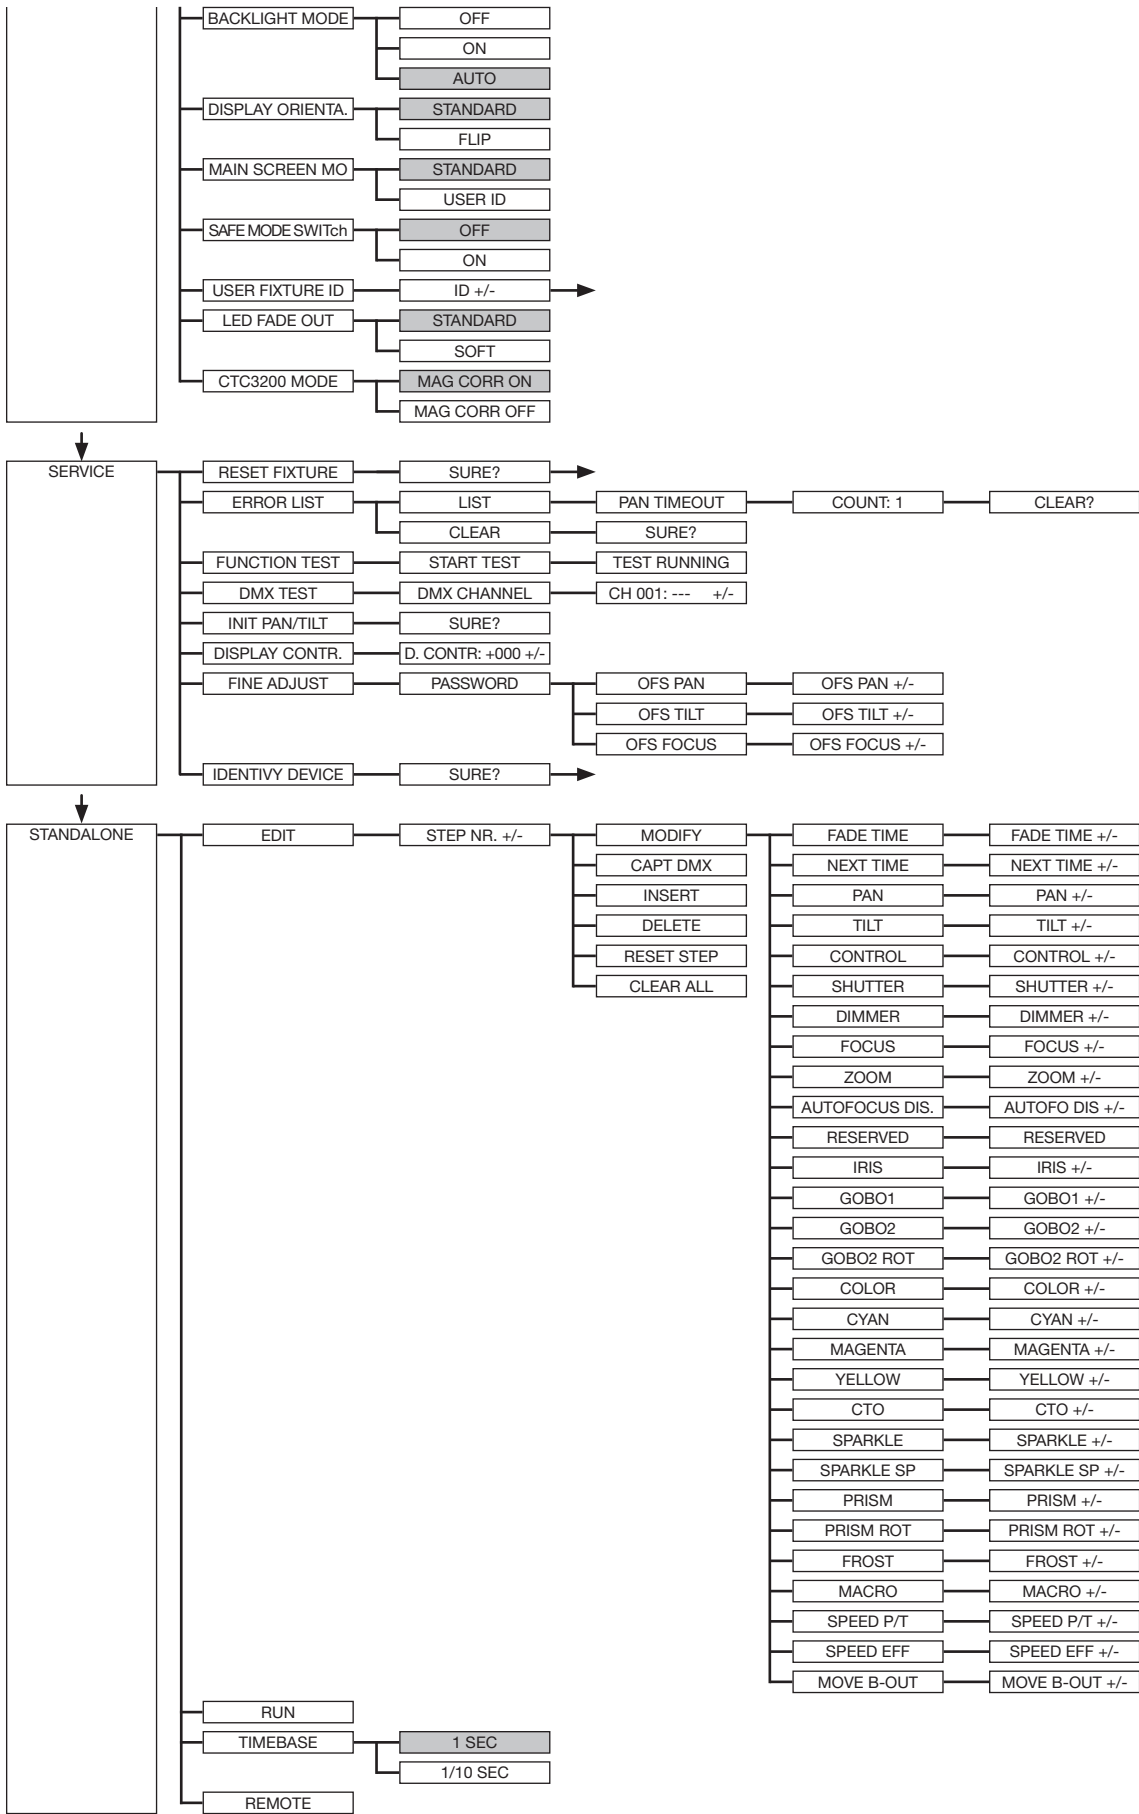

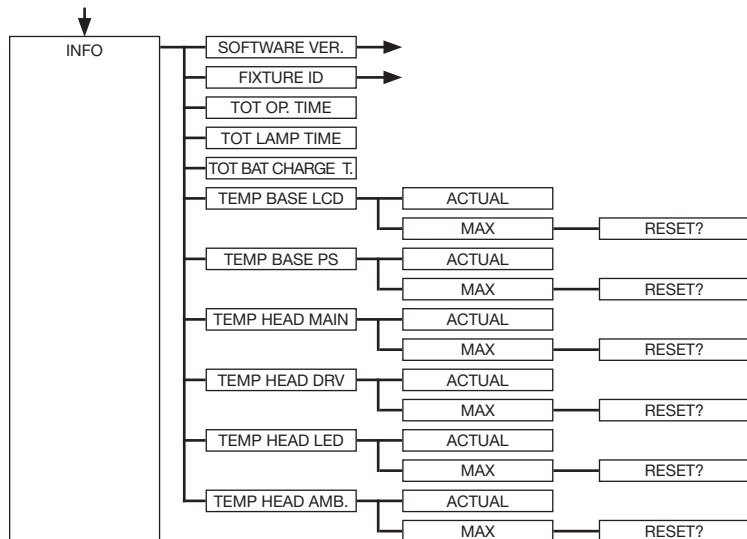

## 6.0 Control options

### 6.1 DMX

#### 6.1.1 Overview DMX channels P9 Beamspot

The P9 Beamspot offers 2 different channel modes. Menu PERSONALITY -> DMX MODE you can select your mode. The used mode will be displayed in the main menu.

	Mode 1(M1)	Mode 2 (M2)
Channel 1	Pan	Pan
Channel 2	Pan fine	Pan fine
Channel 3	Tilt	Tilt
Channel 4	Tilt fine	Tilt fine
Channel 5	Control channel	Control channel
Channel 6	Shutter	Shutter
Channel 7	Dimmer	Dimmer
Channel 8	Focus	Fine dimmer
Channel 9	Zoom	Focus
Channel 10	Autofocus distance	Fine focus
Channel 11	Reserved	Zoom
Channel 12	Iris	Fine zoom
Channel 13	Gobo 1	Autofocus distance
Channel 14	Gobo 2	Reserved
Channel 15	Gobo 2 rotation	Iris
Channel 16	Colour wheel	Fine iris
Channel 17	Cyan	Gobo 1
Channel 18	Magenta	Gobo 2
Channel 19	Yellow	Gobo 2 rotation
Channel 20	CTO	Gobo 2 fine rotation
Channel 21	Sparkle	Colour wheel
Channel 22	Sparkle speed	Cyan
Channel 23	Prism 1	Fine cyan
Channel 24	Prism 1 rotation	Magenta
Channel 25	Frost 1	Fine magenta
Channel 26	Effect macro	Yellow
Channel 27	Pan/tilt speed	Fine yellow
Channel 28	Effect speed	CTO
Channel 29	Blackout Move	CTO fine

---

Channel 30	Sparkle
Channel 31	Sparkle speed
Channel 32	Prism 1
Channel 33	Prism 1 rotation
Channel 34	Prism 1 fine rotation
Channel 35	Frost 1
Channel 36	Effects macro
Channel 37	Pan/tilt speed
Channel 38	Effect speed
Channel 39	Blackout Move

---


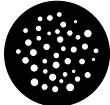





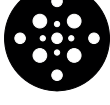






## 6.1.2 DMX channel assignment P9 Beamspot




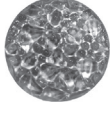
M1	M2	M3	Function	DMX
1	1		<b>Pan (X)</b> movement 546,74°	000-255
2	2		<b>Pan (X)</b> fine (16 Bit)	000-255
3	3		<b>Tilt (Y)</b> movement 281,16°	000-255
4	4		<b>Tilt (Y)</b> fine (16 Bit)	000-255
5	5		<p><b>Control channel - Attention: The control channel functions are not locked by default. Note the PERSONALITY -&gt; SAVE MODE SWITCH setting!</b></p> <p>To enable uniform dimming manually via faders for all light mixing consoles, 5 different settings for the DMX smoothing are available. If the DMX signal is interrupted or too few packets are sent on some DMX consoles, the response of the Sparx 18/30 can be adjusted with this channel. The Minimum DMX Smoothing setting should work on most popular consoles. The values for DMX smoothing must be permanent. For the other values, such as cooling mode, color temperature, zoom modes, camera mode, reset, the values must be applied for 2 seconds, then the device will be permanently switched (Same setting as in the PERSONALITY menu).</p> <p><b>Setting for minimal DMX smoothing</b> (A dimmed shutter sequence is possible) Dimmer fade out via fader (fast - slow) not used</p> <p><b>Setting for minimum / medium DMX smoothing</b> Dimmer fade out via fader (fast - slow) not used</p> <p><b>Setting for medium DMX smoothing</b> Dimmer fade out via fader (fast - slow) not used</p> <p><b>Setting for medium / maximum DMX smoothing</b> Dimmer fade out via fader (fast - slow)</p> <p><b>BACKLIGHT MODE - Display backlight configuration</b> AUTO - the fixture controls the backlight automatically ON - the backlight is always on OFF - the backlight is always off until a key is pressed</p> <p><b>DISPLAY ORIENTATION - display flip or not</b> STANDARD - the display can be read when the headlamp is on a surface FLIP - the display orientation is rotated by 180 °, hanging readable not used</p> <p><b>MAIN SCREEN MODE - view of the main screen</b> STANDARD - the main screen displays the DMX address, the DMX mode, and when wireless is enabled, the field strength. USER FIXTURE ID - the main screen displays the user definable fixture ID / headlight number not used</p> <p><b>USER FIXTURE ID SET - Scheinwerfernummer setzen</b> SET - the USER ID can be set. The headlamp takes the 16-bit value of Pan for the USER ID not used</p>	<p>000-007 008-031</p> <p>032-039 040-063</p> <p>064-071 072-095</p> <p>096-103</p> <p>104-104 105-105 106-106</p> <p>107-107 108-108 109-109</p> <p>110-110 111-111 112-112</p> <p>113-113 114-127</p>

	<b>Setting for maximum DMX smoothing</b> Dimmer fade out via fader (fast - slow)	128-135
	<b>DIMMER CURVE - selection of dimmer curve</b> LINEAR - linear dimmer curve SQUARE - exponential dimmer curve SQUARE INVERSE - exponential inverse dimmer curve not used	136-136 137-137 138-138 139-139
	<b>RGB/CMY CURVE - selection of RGB/CMY curve</b> SQUARE INVERSE OLD - Exponential inverse old RGB/CMY curve LINEAR - linear RGB/CMY curve SQUARE INVERSE - Exponential inverse RGB/CMY curve	140-140 141-141 142-142
	<b>FROST CURVE - selection of frost curve</b> LINEAR - linear frost curve SQUARE INVERSE - Exponential inverse frost curve not used	143-143 144-144 145-145
	<b>PAN/TILT SPEED - selection of PAN/TILT speed</b> WHISPER SILENT MEDIUM FAST	146-146 147-147 148-148 149-149
	<b>EFFECT SPEED - selection of effect speed</b> WHISPER SILENT MEDIUM FAST	150-150 151-151 152-152 153-153
	<b>LED FADE OUT MODE - selection of dimming out</b> STANDARD SOFT not used	154-154 155-155 156-157
	<b>CTC3200K MODE - setting the magenta correction for CTO</b> MAG CORR ON MAG CORR OFF	158-158 159-159
	<b>COOLING MODE - Adjust the fan volume and brightness</b> This takes place with dimmer / shutter set to closed (DMX 000) then after 2 seconds the fixture will switch this option, except the switch "SAFE MODE SWITCH" in the PERSONALITY menu is set to OFF, then the changeover can take place directly without dimmer and shutter having to be closed. THEATRE WHISPER THEATRE SILENT STANDARD BOOST LONGLIFE not used	160-160 161-161 162-162 163-163 164-164 165-207
	<b>CAMERA MODE - Setting the LED refresh rate</b> 50Hz 60Hz FLEX - 600Hz High FLEX - 3kHz not used	208-215 216-223 224-227 228-231 232-239
	<b>RESET - a basic reset of the fixture is carried out</b> Reset nicht belegt	240-247 248-255

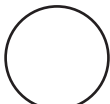6	6	<p><b>Shutter</b>          Shutter closed          Shutter open          Open pulsing shutter &gt;20Hz (rapid - slow)          Shutter open          Fade effect with dimmer (slow - rapid)          Shutter open          Shutter closed          Open pulsing shutter &lt;20Hz (rapid - slow)          Shutter open          Close pulsing shutter &gt;20Hz (rapid - slow)          Shutter closed          Shutter fade, 0% (rapid - slow)          Shutter open          Shutter fade, 100% (rapid - slow)          Shutter closed          Random shutter 100% (rapid - slow)          Shutter open          Random shutter 0% (rapid - slow)          Shutter closed          Random shutter fade, 0% (rapid- slow)          Shutter open          Random shutter fade, 100% (rapid- slow)          Shutter open</p>	<p>000-015          016-095          096-110          111-111          112-125          126-126          127-126          128-142          143-143          144-158          159-159          160-174          175-175          176-190          191-191          192-206          207-207          208-222          223-223          224-238          239-239          240-254          255-255</p>
7	7	<b>Dimmer 0 - 100%</b>	000-255
	8	<b>Dimmer fine (16Bit)</b>	000
8	9	<b>Focus 0-100%</b>	000-255
	10	<b>Focus fine (16 Bit)</b>	000-255
9	11	<b>Zoom 0 -100% (near 3.4° - far 54°)</b>	000-255
	12	<b>Zoom fine (16 Bit)</b>	000-255
10	13	<p><b>Auto focus distance</b>          Auto focus off          Auto focus 0 m - 25,5 m (0 =off, DMX / 10 = distance)</p>	<p>000-001          002-255</p>
11	14	<b>Reserved (no function)</b>	000-255
12	15	<b>Iris 0-100% (open -&gt; closed)</b>	000-255
	16	<b>Iris fine (16Bit)</b>	000-255
13	17	<p><b>Gobo wheel 1</b>          Gobo 0</p> <p>Gobo 1</p>	<p>000-007</p> <p>008-015</p>

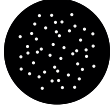

		Gobo 2		016-023
		Gobo 3		024-031
		Gobo 4		032-039
		Gobo 5		040-047
		Gobo 6		048-055
		Gobo 7		056-063
		Gobo 8		064-071
		Gobo 9		072-079
		Gobo 10		080-087
		Gobo 11		088-191
		Gobo wheel rotation (fast - slow)		192-223
		Gobo wheel rotation (fast - slow)		224-255
14	18	<b>Gobo wheel 2 - rotating gobos</b>		
		Gobo 0		000-007
		Gobo 1		008-015
		Gobo 2		016-023
		Gobo 3		024-031

		Gobo 4		032-039
		Gobo 5		040-047
		Gobo 6		048-055
		Gobo 7		056-127
		Gobo 0 shake (fast - slow)		128-135
		Gobo 1 shake (fast - slow)		136-143
		Gobo 2 shake (fast - slow)		144-151
		Gobo 3 shake (fast - slow)		152-159
		Gobo 4 shake (fast - slow)		160-167
		Gobo 5 shake (fast - slow)		168-175
		Gobo 6 shake (fast - slow)		176-183
		Gobo 7 shake (fast - slow)		184-191
		Gobo wheel rotation (fast - slow)		192-223
		Gobo wheel rotation (fast - slow)		224-255
15	19	<b>Gobo positioning/rotation 2</b> Gobo positioning 0° - 540° Gobo rotation, right (rapid - slow) Stop gobo rotation Gobo rotation, left (slow - rapid)		000-191 192-222 223-224 225-255
	20	<b>Gobo positioning/rotation 2 fine (16 Bit)</b>		000-255
16	21	<b>Color wheel</b> White (color shift gobo on) White (color shift gobo off) White / CTB CTB CTB / Red Red Red / Yellow Yellow Yellow / Magenta Magenta Magenta / Green Green Green / Orange Orange Orange / Blue Blue Blue / Pink Pink Pink / CRI CRI CRI / CTO CTO		000-000 001-001 002-003 004-005 006-007 008-009 010-011 012-013 014-015 016-017 018-019 020-021 022-023 024-025 026-027 028-029 030-031 032-033 034-035 036-037 038-039 040-063

		Linear colours: White - CTB - Red - Yellow - Magenta - Green - Orange - Blue - Pink - CRI - CTO - White Colour cycle, right (rapid - slow) Colour cycle, left (slow - rapid)	064-191 192-223 224-255
17	22	<b>Cyan</b> (8 Bit) 0-100%	000-255
	23	<b>Fine cyan</b> (16 Bit)	000-255
18	24	<b>Magenta</b> (8 Bit) 0-100%	000-255
	25	<b>Fine magenta</b> (16 Bit)	000-255
19	26	<b>Yellow</b> (8 Bit) 0-100%	000-255
	27	<b>Fine yellow</b> (16 Bit)	000-255
20	28	<b>CTO</b> (8 Bit) 0-100% model HP, HC / <b>CTB</b> (8 Bit) 0-100% model WW	000-255
	29	<b>CTO fine</b> (16 Bit) / <b>CTB fine</b> (16 Bit) model WW	000-255
21	30	<b>Sparkle - Glitter effect</b> Sparkle effect inactive Sparkle effect intensity (minimum - maximum)	000-000 001-255
22	31	<b>Sparkle speed</b> Faded sparkle effect (slow -> rapid) Switched sparkle effect (slow -> rapid) Repetition of the fading and switching blocks	000-031 032-063 064-255
23	32	<b>Prism 1</b> Open Prism 1 (3-facet circular)	000-007 008-255
24	33	<b>Prism 1 positioning/rotation</b> Prism positioning (0° - 540°) Prism rotation, right (rapid -> slow) Stop prism rotation Prism rotation, left (slow -> rapid)	000-191 192-222 223-224 225-255
	34	<b>Prism 1 fine positioning/rotation</b> (16 Bit)	000-255
25	35	<b>Frost 1</b> Frost 0-100%	000-255
26	36	<b>Effects macro</b> Macro inactive Macro 001 - Macro 255	000-000 001-255
27	37	<b>Pan/tilt speed</b> Real-time motion Delayed motion (rapid - slow)	000-003 004-255
28	38	<b>Effects speed</b> Real-time effects Delayed effects (rapid - slow)	000-003 004-255

29	39		<b>Blackout Move</b>	
			Not assigned	000-095
			Blackout during pan/tilt	096-127
			Blackout during Gobo, Colour, Prism, CMY, Iris, Frost	128-159
			Blackout during Gobo, Colour, Prism, CMY, Iris, Frost, Zoom, Focus	160-191
			Blackout during Gobo, Colour, Prism, CMY, Iris, Frost, Pan/Tilt	192-223
			Blackout during Gobo, Colour, Prism, CMY, Iris, Frost, Zoom, Focus, Pan/Tilt	224-255

### 6.1.3 Control channel

Via the control channel different functions of the fixture can be switched. The following functions can be switched via the control channel.

Response of the headlamp when dimming via faders

BACKLIGHT MODE - display backlight

DISPLAY ORIENTATION - display orientation

MAIN SCREEN MODE - main screen view

USER FIXTURE ID SET - set headlight number

DIMMER CURVE - dimmer curve adjustment

FROST CURVE - setting the frost curve

PAN / TILT SPEED - pan / tilt speed

EFFECT SPEED - effect speed

LED FADE OUT MODE - type of dimming

CTC3200 MODE - setting the magenta correction for CTO

COOLING MODE - adjust the fan volume and brightness

CAMERA MODE - sets the LED refresh rate

RESET - a basic reset of the headlight is performed

For details, see DMX Channel Functions for the P9 Beamspot on page 24.

### 6.1.4 Sparkle effect, sparkle speed

Animation effects can be created via this channel in connection with the focus. Depending on the intensity, the projection can be made to shake more or less. This effect can be dimmed or switched.

### 6.1.5 Auto focus

To activate the autofocus function, set the autofocus distance channel to around 50%. Then best use gobo wheel 2 for fine adjustment of the system and set the focus accordingly to 125 (32000): Then set the distance to the headlight by focusing the headlight using the autofocus distance. As a guideline, DMX value divided by 10 corresponds to the distance (DMX 100/10 distance = 10m). Now the headlight can be operated with autofocus via the zoom. Using the following table, the focus values for the individual effects can now be preselected and zoomed in with autofocus.

	Gobo1	Gobo2 Open	Iris
Focus 8Bit	95	125	215
Focus 16Bit	24320	32000	55040

## 6.2 Artnet

The spotlight can be controlled via Artnet - ArtNET 4. To do this, set the Artnet address via the menu item DMX / NET ADDR -> ARTNET ADDRESS and also select it via the menu item PERSONALITY -> DMX INPUT CONFIG -> NETWORK -> MODE -> ARTNET. In addition, define the IP address of the spotlight via PERSONALITY -> DMX INPUT CONFIG -> NETWORK -> IP ADDRESS.

### **6.3 Streaming ACN**

The headlight can be controlled via sACN - Streaming ACN. To do this, set the sACN address via the menu item DMX / NET ADDR -> SACN ADDRESS and also select it via the menu item PERSONALITY -> DMX INPUT CONFIG -> NETWORK -> MODE -> SACN. In addition, define the IP address of the spotlight via PERSONALITY -> DMX INPUT CONFIG -> NETWORK -> IP ADDRESS.

### **6.4 Wireless-DMX**

The P9 Beamspot is equipped with a Lumen Radio CRMX receiver for wireless DMX. The receiver can process both DMX and RDM. If there is a cable and wireless connection to the P9 Beamspot, the cable connection has priority! The received signal can be output via the DMX connection. To do this, set the DMX OUTPUT CONFIG setting to ON in the PERSONALITY menu. After confirming with ENTER, the spotlight will output the entire universe received via wireless DMX.

### **6.5 RDM**

The P9 Beamspot can communicate via RDM (Remote Device Management) in accordance with ESTA American National Standard E1.20-2006. RDM is a bidirectional communication protocol for use in DMX512 control systems. It is the open standard for the configuration and status monitoring of DMX-512 devices. The RDM protocol enables data packets to be inserted into a DMX-512 data stream without affecting existing non-RDM devices. It enables a console or dedicated RDM controller to send commands to specific devices and receive messages. The P18 can send and receive RDM via DMX and Artnet 4. The spotlight is also designed to send RDM via sACN and receive it via Artnet. The RDM functionality depends on the lighting control desk used, the operating instructions of the respective desk manufacturer must also be observed.

#### **6.5.1 RDM-UID**

Every P9 Beamspot has a factory-set RDM-UID (unique identification number), which makes it addressable and identifiable in RDM systems.

#### **6.5.2 RDM-PIDs**

The P9 Beamspot supports the RDM PIDs (parameter IDs) required by ESTA as well as manufacturer-specific PIDs.

### 6.5.3 Standard RDM parameter IDs

RDM parameter ID	GET	SET	DISCO- VERY	Note
<b>RDM identification</b>				
DISC_UNIQUE_BRANCH			✓	is used for fixture identification
DISC_MUTE			✓	is used for fixture identification
DISC_UN_MUTE			✓	is used for fixture identification
<b>RDM status determination</b>				
QUEUED_MESSAGE	✓			
STATUS_MESSAGES	✓			
STATUS_ID_DESCRIPTION	✓			
CLEAR_STATUS_ID		✓		
<b>RDM information</b>				
SUPPORTED_PARAMETERS	✓			
<b>RDM configuration</b>				
DEVICE_MODEL_DESCRIPTION	✓			
MANUFACTURER_LABEL	✓			
FACTORY_DEFAULTS		✓		
SOFTWARE_VERSION_LABEL	✓			
DMX_PERSONALITY		✓		
DMX_PERSONALITY_DESCRIPTION	✓			
DMX_START_ADDRESS		✓		
SENSOR_DEFINITION	✓			
DEVICE_HOURS	✓			
LAMP_HOURS	✓			
IDENTIFY_DEVICE		✓		
RESET_DEVICE		✓		
PERFORM_SELFTEST		✓		
SELFTEST_DESCRIPTION	✓			

### 6.5.4 Manufacturer specific RDM parameter IDs

RDM parameter ID	GET	SET	DISCO- VERY	Note
<b>RDM configuration</b>				
Battery Charge Hours	✓			
Error Number	✓			
Error	✓			
Select Next Error		✓		
Remove Error		✓		
Remove New Error Flag		✓		
User Defaults		✓		
User Fixture ID		✓		
Fixture Lock On/Off	✓	✓		
Dimmer Curve	✓	✓		
RGB Curve	✓	✓		
Frost Curve	✓	✓		
Camera Mode	✓	✓		


Cooling Mode	✓	✓		
Pan Tilt Speed	✓	✓		
Effect Speed	✓	✓		
Backlight Mode	✓	✓		
Disp Orientation	✓	✓		
Main Screen Mode	✓	✓		
Safe Mode Switch	✓	✓		
LED Fade Out Mode	✓	✓		
CTC3200 Mode	✓	✓		

**6.5.5 RDM sensor IDs**

RDM sensor ID	GET	SET	DISCO- VERY	Note
<b>RDM sensors</b>				
Temp Sens Base LCD	✓	✓		
Temp Sens Base PS	✓	✓		
Temp Sens Head PCB	✓	✓		
Temp Sens Head Drv	✓	✓		
Temp Sens Head LED	✓	✓		
Temp Sens Head Air	✓	✓		





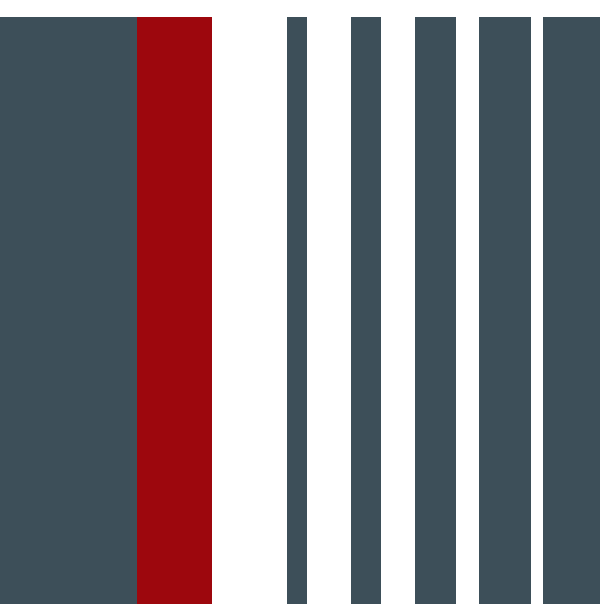

JB-Lighting Lichtanlagentechnik GmbH  
Sallersteig 15  
89134 Blaustein  
Tel. +49 7304 9617-0  
Fax. +49 7304 9617-99  
info@jb-lighting.de  
www.jb-lighting.de

**JB LIGHTING**